Mopar ACCESSORIES

MOLDED SPLASH GUARD
INSTALLATION INSTRUCTIONS

Vehicle Application: XJ REAR P/N 82202718

Please read instructions thoroughly before starting.

REAR:

Tools Required:

- #2 Phillips Screwdriver
- 5/16", 1/16" Drill bit / Drill
- Center Punch
- Small Hammer
- Clean Cloth/Rag

Package Contents:

Item#	Qty	Description
1	1	Passengers Side Splashguard
2	1	Drivers Side Splashguard
3	6	#10 x 3/4" Screws
4	6	#10 Spring Clips
5	2	#8 x3/4" Screws
6	1	Instruction Sheet

1. Clean and degrease rear bumper cover where the Splashguards are to be located.
2. Position Splashguard on bumper cover. While holding firmly in position use part as a drill template. Drill 5/16" holes at positions 1, 2 & 3 (See diagram A).
3. Install supplied spring clips over drilled holes (See diagram A & B).
4. Remount part and install supplied #10 screws in positions 1, 2 & 3. Hold part firmly in position and tighten screws.
5. While holding part firmly against bumper cover drill a 1/16" pilot hole in the center of hole location 4 (see diagram A). Install supplied #8 screw. **Do not over tighten**.
6. Repeat procedure for other side.

A

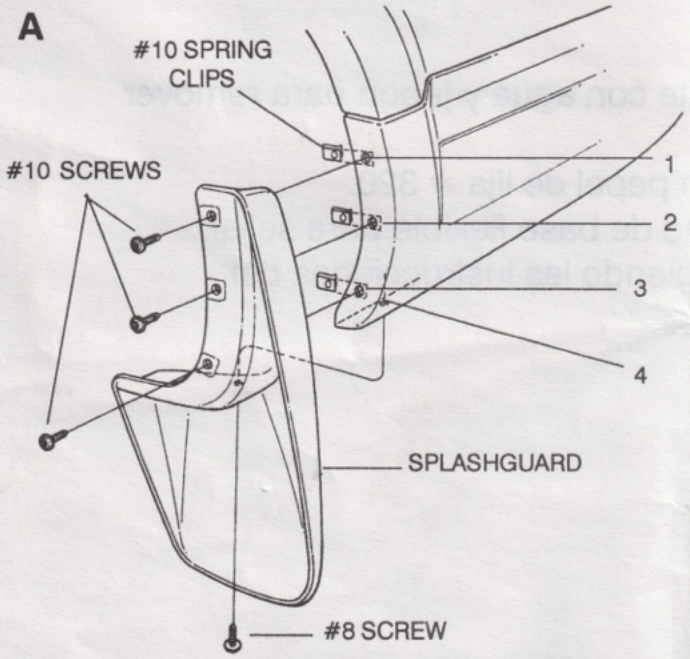

B

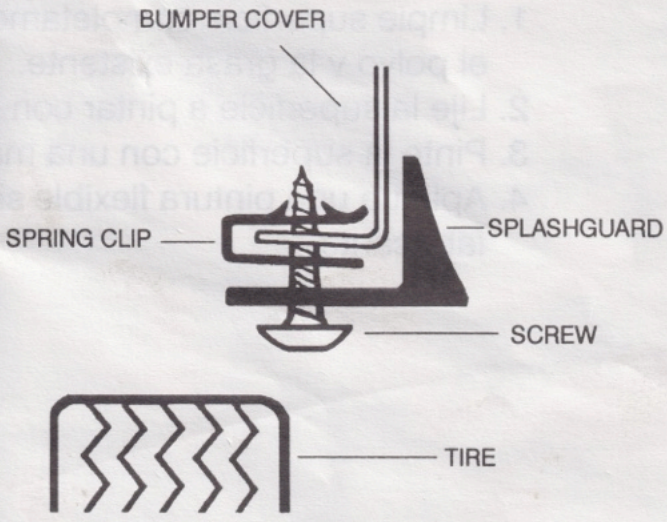

Install clip with turned up edge on inside of bumper edge

PAINTING INSTRUCTIONS

1. Clean all surfaces with soap and water to remove dust and fingerprints.
2. Sand surface to be palnted with 320 grit paper.
3. Spray surface with a flexible primer-bonding material.
4. Apply a flexible paint as directed by the paint manufacturer.

DIRECTIVES POUR PEINDRE

1. Nettoyer toutes les surfaces au savon et à l'eau pour enlever toutes empreintes et poussière.
2. Sabler les surfaces à peindre au papier # 320.
3. Vaporizer les surfaces d'un enduit d'appoint-flexible.
4. Suivre les directives du manufacturier de peinture pour appliquer la peinture flexible.

INSTRUCCIONES PARA PINTAR

1. Limpie superficie completamente con agua y jabon para remover el polvo y la grasa existente.
2. Lije la superficie a pintar con un papel de lija # 320.
3. Pinte la superficie con una mano de base flexible para sellar.
4. Aplique una pintura flexible siguiendo las instrucciones del fabricante.